

<b>What is i-appli?</b> .....	228
<b>Downloading i-appli from Sites</b> .....	«i-appli Download» 228
<b>Starting i-appli</b> .....	«i-appli Run» 229
<b>Setting i-appli</b> .....	«i-appli Settings» 240
<b>Starting i-appli Automatically</b> .....	241
<b>Operating i-appli Stand-by Display</b> .....	«i-appli Stand-by Display» 241
<b>Displaying i-appli Data Files on the microSD Memory Card</b> .....	«i-appli(microSD)» 242

## What is i-appli?

By downloading i-appli from i-mode sites, i-mode phone becomes more convenient. For example, you can enjoy various games downloaded to your i-mode phone, and can also use the i-appli which enables you to directly store the data into the Phonebook or Schedule, or the i-appli which links to Data Box, enabling you to save or obtain images.

 
- For details on the i-appli, refer to the "Mobile Phone User's Guide [i-mode] FOMA version".

### <i-appli Download>

## Downloading i-appli from Sites

You can download software programs from sites to the FOMA phone. You can save up to 100 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 482)

- 1 Bring up an i-appli downloadable site  
▶ Select a software program.

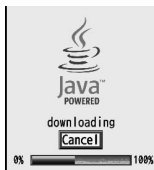

- 2 Select "OK" when downloading ends.

- See page 168 when i-appli programs are stored to the maximum.
- When downloading ends, the display for Software Setting (Network Set, Stand-by Set, or Program Guide Key) might appear. These settings can be done also from the Software List.

- 3 YES or NO

YES . . . . Starts i-appli.

NO . . . . Returns to the site display.

## When downloading is suspended

When you press **CLR** or **END** to suspend downloading an i-appli program of 100 Kbytes or more, or when downloading is suspended by the radio wave conditions, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the confirmation display asking whether to save the file downloaded halfway. Select "YES" to partially save the file.

You can re-download the rest of the partially saved i-appli program from the Software List.

## When you downloaded mail-linked i-appli

An i-appli mail folder is created automatically each in the Inbox/Outbox Folder List, and the title of the downloaded mail-linked i-appli becomes the name of the folder.

- You can save up to five mail-linked i-appli programs.
- You cannot download the software program if the mail-linked i-appli using the same folder is already in the Software List.
- You cannot download mail-linked i-appli while Mail Security is set.
- You cannot download mail-linked i-appli if the Inbox/Outbox Folder List contains five i-appli mail folders.
- When re-downloading mail-linked i-appli whose folder only remains, the confirmation display appears asking whether to use the existing i-appli mail folder. If you select "YES", the existing folder is used. If you select "NO" because you do not use it, the confirmation display appears asking whether to delete an existing folder and create a new one. You cannot download mail-linked i-appli without creating a new folder.

### Information

- You can download pre-installed i-appli programs from the "P-SQUARE" site (Japanese only).


☎ Menu→メニュー／検索 (Menu/Search)

→ケータイ電話メーカー (Mobile Phone Maker)

→P-SQUARE

QR code for  
accessing the site




- Downloading is not available at some accessed sites.
- Some i-appli programs can automatically connect to the i-mode Center after they are downloaded. However, to use this service, you need to set it in advance in "Software setting (Network set)".
-  appears at the top of the display while software information or a software program is being downloaded from SSL pages.

## Information

- At downloading, the confirmation display might appear asking whether to send the "serial number of your mobile phone/UIM". Select "YES" to start downloading. In this case, the "serial number of your mobile phone/UIM" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.
- If you attempt to re-download the software program that was downloaded using a different UIM, the confirmation display appears asking whether to overwrite the software program. With the Osaifu-Keitai compatible i- $\alpha$ pli, the confirmation display appears telling that the data on the IC card is to be deleted. Select "YES" to start downloading. When downloading ends, the software program that was downloaded using a different UIM and the data on the IC card are deleted.
- You cannot download some software programs while the IC card function is working or IC Card Lock is activated.
- Some software programs that start immediately after downloading cannot be saved.
- Depending on the data volume on the IC card, you might not be able to download Osaifu-Keitai compatible i- $\alpha$ pli even if there is still available space for software storage. Delete the displayed software programs following the confirmation display, and then download it again. (Some software programs might not be targeted for deletion, depending on the software type to be downloaded.) Depending on the software program, you need to start it and delete the files on the IC card before deleting the software program itself.
- You can save up to 1 Mbyte per i- $\alpha$ pli program.
- "i- $\alpha$ pli mail" is the mail sent and saved by mail-linked i- $\alpha$ pli and mail received as mail-linked i- $\alpha$ pli. i- $\alpha$ pli mail is automatically saved to the i- $\alpha$ pli mail folder.
- The 3D polygonal<sup>※</sup> engine enables cubic images to be displayed in i- $\alpha$ pli.  
※By combining polygons, a deep, cubic image is displayed.


## Display Software Info










You can display software information when downloading i- $\alpha$ pli.

- 1  i- $\alpha$ pli   $\alpha$ pli settings  Disp. software info  
▶ Display or Not display

<i- $\alpha$ pli Run>

## Starting i- $\alpha$ pli

- 1  (for at least one second)  
▶ Select a software program to be started.

-  : Osaifu-Keitai compatible i- $\alpha$ pli
-  : Management information i- $\alpha$ pli
-  : microSD memory card compatible i- $\alpha$ pli
-  : i- $\alpha$ pli DX
-  : Mail-linked i- $\alpha$ pli
-  : Partially saved i- $\alpha$ pli
-  : Set for Auto Start
-  : Set for the i- $\alpha$ pli Stand-by display
-  : Set for both Auto Start and the i- $\alpha$ pli Stand-by display



 

Can set for the i- $\alpha$ pli Stand-by display


 

 



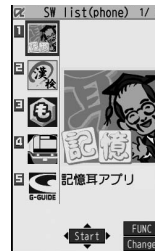 
Downloaded from an SSL page



Downloaded or upgraded by using a different UIM

• You can display the Software List on the microSD memory card by  i- $\alpha$ pli   $\alpha$ pli (microSD) ▶ SW list (microSD).

- Each time you press  (Change) from the Software List in the FOMA phone, the display format changes.
- When you start an i- $\alpha$ pli DX program or while it is running, the confirmation display might appear asking whether to permit the i- $\alpha$ pli DX program to use the FOMA phone's information and functions.
- When you select a partially saved i- $\alpha$ pli program, you can download the remaining part of it.
- "" or "" is displayed while i- $\alpha$ pli is running.
- To end i- $\alpha$ pli, press and hold  for at least one second or press ; then select "YES".
- The software program you started last time comes at the top of the list. You cannot manually change the order of software programs.
- See page 167 when you select "Search by i-mode".



Software List

## Bring up IC Card List

You can list up Osaifu-Keitai compatible i- $\alpha$ pli programs.

### 1 MENU ▶ Osaifu Keitai ▶ IC card content


- See page 167 when you select "Search by i-mode".



### Information

- When a software program to be started is not specified, select a software program.
- To start up i- $\alpha$ pli DX, set the data and time by "Set time" beforehand.
- When a software program is running, melodies are played back at the volume set for "Phone" of "Ring volume". However, melodies are not played back during a call.
- You may need to set the communication setting while a software program is running.
- When communicating frequency is extremely high in a certain period of time while i- $\alpha$ pli is running, the confirmation display appears asking whether to continue communicating.
- With some software programs, you can use the Web To function and the Phone To/AV Phone To function from i- $\alpha$ pli. However, you cannot use them while the software program is running as the i- $\alpha$ pli Stand-by display.
- If you start the camera from i- $\alpha$ pli, the shot images are not saved with ordinary images, but are saved as part of i- $\alpha$ pli for its usage.
- If you start the camera from i- $\alpha$ pli, you can specify the image size or image quality for some i- $\alpha$ pli programs.
- You can scan QR codes and JAN codes from i- $\alpha$ pli using the camera. The scanned data is saved and used by the software program.
- Images<sup>※</sup> that are used by i- $\alpha$ pli and data you have entered might be sent over the Internet to the server automatically.  
※i- $\alpha$ pli uses the following types of images:
  - Images shot by the camera after it is started from a camera-linked application program
  - Images obtained by the infrared data exchange function of i- $\alpha$ pli
  - Images downloaded from sites or Internet web pages
  - Images obtained from Data Box by i- $\alpha$ pli
- i- $\alpha$ pli mail running under mail-linked i- $\alpha$ pli might not be displayed correctly.

### Information

- Some i- $\alpha$ pli programs save the various information used on i- $\alpha$ pli when you finish it. However, the information might not be saved if the low battery alarm sounds or the battery pack is removed while i- $\alpha$ pli is running. If the battery level indicates "⚡", either press  or end i- $\alpha$ pli in accordance with the operation of each software program.
- You can save the data files of some software programs to the microSD memory card, but you might not be able to use them for another model. You can check "i- $\alpha$ pli(microSD)" for the software programs that use the microSD memory card.
- Some IPs (Information Providers) may access the software program stored in your mobile phone and have it directly halted, depending on the software program. In that case, you will not be able to start or upgrade the software program, or use it for the Stand-by display. You can delete it or display the software information. To resume running the software program, you need to receive the communication to cancel the software halting state. Contact the IP (Information Provider) to inquire about that.
- Some IPs (Information Providers) might send data to the software program stored in your mobile phone depending on the software program.
- When the IP (Information Provider) requests to halt or re-open the software program or sends data to it, the mobile phone communicates and "⚡" is displayed. In this case, you are not charged a communication fee.
- To creators of i- $\alpha$ pli  
If you encounter an error while creating a software program, the Trace Information display might help identify the problem.  
For how to check the trace information, see "Trace Information" on page 230.

## Trace Information

You can check the details when a software program malfunctions.


### 1 MENU ▶ i- $\alpha$ pli ▶ i- $\alpha$ pli info ▶ Trace info

- When the memory space for Trace Info becomes full, the information is overwritten from the oldest one.
- You can operate "Copy info" and "Delete info" from the Function menu.

 



## Security Error History






You can check the details when an i-**appli** program ends because of a security error.

### 1 i-**appli** **appli info** Security error history

- You can operate "Copy info" and "Delete info" from the Function menu.
- You can display the security error history also by selecting " Error" on the desktop.

## Function Menu of the Software List/IC Card List

Function menu	Operation/Explanation
<b>Set  <b>appli To</b></b>	You can set whether to permit the i- <b>appli</b> program to start from links on sites or mail. You can also set whether to start the i- <b>appli</b> program when you place the FOMA phone over an IC card compatible scanning device. You can set this for each software program. ▶ <b>Put a check mark for items to be set</b>  <b>(Finish)</b> • Some items might not be set depending on the software program.
<b>Auto start time</b>	See page 241.
<b>Software setting (Stand-by set)</b>	See page 241.
<b>Software setting (Network set)</b>	You can set whether to communicate while i- <b>appli</b> is running. ▶ <b>Network set</b> ▶ ON, OFF or Check every start  <b>(Finish)</b> • If you select "Check every start", the confirmation display appears each time you start it.
<b>Software setting (Stand-by net)</b>	See page 242.
<b>Software setting (Icon info)</b>	You can set whether to permit the i- <b>appli</b> program to use information of icons indicating i-mode mail, SMS messages, Messages R/F, battery level, Manner Mode, and within/out-of service area. ▶ <b>Icon info</b> ▶ ON or OFF  <b>(Finish)</b>

Function menu	Operation/Explanation
<b>Software setting (Change mld/img.)</b>	You can set whether to permit the i- <b>appli</b> to change the setting for ring tones or the Stand-by display. This function is available only for i- <b>appli</b> DX. ▶ <b>Change mld/img.</b> ▶ ON, OFF or Check every change  <b>(Finish)</b> • If you select "Check every change", the confirmation display appears each time you change the setting for ring tones and the Stand-by display from i- <b>appli</b> .
<b>Software setting (See P. book/hist.)</b>	You can set whether to permit the i- <b>appli</b> to refer to the Phonebook, Redial, and Received Calls. This function is available only for i- <b>appli</b> DX. ▶ <b>See P. book/hist.</b> ▶ ON or OFF  <b>(Finish)</b>
<b>Software setting (View ToruCa)</b>	You can set whether to permit the i- <b>appli</b> to refer to ToruCa files. This function is available only for i- <b>appli</b> DX. ▶ <b>View ToruCa</b> ▶ ON or OFF  <b>(Finish)</b>
<b>Software setting (Program guide key)</b>	You can set the software program for the Program Guide i- <b>appli</b> that starts up from One Seg. You can set this for only the i- <b>appli</b> DX that links to One Seg. ▶ <b>Program guide key</b> ▶ ON or OFF  <b>(Finish)</b>
<b>Software info</b>	You can display the software name and version of the i- <b>appli</b> .
<b>Upgrade</b>	▶ YES
<b>Add desktop icon</b>	See page 113.
<b>Delete (Delete this)</b>	▶ <b>Delete this</b> ▶ YES
<b>Delete (Delete selected)</b>	▶ <b>Delete selected</b> ▶ <b>Put a check mark for software programs to be deleted</b>  <b>(Finish)</b> ▶ YES
<b>Delete (Delete all)</b>	▶ <b>Delete all</b> ▶ <b>Enter your Terminal Security Code</b> ▶ YES
<b>Move to microSD</b>	See page 319.
<b>Move to phone</b>	See page 319.
<b>Power saver</b>	You can set whether to validate Power Saver Mode for each i- <b>appli</b> program for when "oPower saver" is set to "ON". ▶ ON or OFF

## Information

### <Software setting (Icon info)>

- When you set "Software setting (Icon info)" to "ON" for the i-ϕpli Stand-by display, the icon information for unread mail/message, battery level, Manner Mode, radio wave strength and out-of-service area can be sent to the IP (Information Provider) over the Internet in the same way as the serial number of your mobile phone/UIM, and can be deciphered by third parties.
- When the software program needs "Software setting (Icon info)", the software program might not run if "OFF" is selected.

### <Upgrade>

- Depending on the software program, you can upgrade it at start.
- At upgrading, the confirmation display might appear asking whether to send the "serial number of your mobile phone/UIM". Select "YES" to start upgrading. In this case, the "serial number of your mobile phone/UIM" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.
- You cannot upgrade the mail-linked i-ϕpli in the following cases:
  - While details of the corresponding i-ϕpli mail folder are displayed
  - While Mail Security is set
  - When Mail Security is set for the corresponding i-ϕpli mail folder

### When you delete mail-linked i-ϕpli

The confirmation display appears asking whether to delete the i-ϕpli mail folder as well. If you do not delete it, you can check the text of mail from the Outbox/Inbox List.

YES . . . . . Deletes both the software program and the i-ϕpli mail folder.

NO . . . . . Deletes the software program only and the i-ϕpli mail folder is left.

Cancel . . . . . Does not delete both the software program and i-ϕpli mail folder; the former display returns.

- You can delete neither the i-ϕpli program nor the i-ϕpli mail folder even if you select "YES", in the following cases:
  - While displaying details of the folder
  - While Mail Security is set
  - While the folder is set with security
  - When the folder contains protected mail

### When you delete an i-ϕpli program whose files are on the microSD memory card

The confirmation display appears asking whether to delete files on the microSD memory card as well.

YES . . . . . Deletes both the software program and files on the microSD memory card. Press "YES" again on the confirmation display. You need to enter your Terminal Security Code to execute "Delete" or "Delete selected".

NO . . . . . Deletes the software program only and the files are left.

Cancel . . . . . Does not delete both the software program and files on the microSD memory card, and the former display returns.

### When you delete Osaifu-Keitai compatible i-ϕpli

The confirmation display appears telling that the files on the IC card will be deleted.

- You might not be able to delete the Osaifu-Keitai compatible i-ϕpli unless you delete the files on the IC card after starting the Osaifu-Keitai compatible i-ϕpli.
- You might not be able to delete the Osaifu-Keitai compatible i-ϕpli while the IC card function is working or IC Card Lock is set.

 
## Pre-installed i-ϕpli Programs

### The following i-ϕpli programs are pre-installed:

- You can delete the pre-installed i-ϕpli programs except for "Gガイド番組表リモコン (G Guide Program List Remote-controller)". You can re-download them from the "P-SQUARE" site (see page 168). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to them.
- Deadlines for re-download services
  - "七田式！記憶耳アプリ (Shichida Method! Memory Ear Application)": the end of December, 2011
  - "旺文社漢検アプリ for P (Obunsha Kanji Test Application for P)": the end of January, 2012
  - "もじリスヘキサ (Mojiris Hexagon)": the end of January, 2012
  - "カウントダウントレイン-P (Countdown Train-P)": the end of January, 2011
- The re-download service might be halted or closed without notice even in the service period.
- Deadlines for downloading i-ϕpli additional data
  - "七田式！記憶耳アプリ (Shichida Method! Memory Ear Application)": the end of January, 2012
  - "カウントダウントレイン-P (Countdown Train-P)": the end of February, 2011

## 七田式！記憶耳アプリ (Shichida Method! Memory Ear Application)

An epoch-making application program that enables you to train your right brain through hearing, which has been designed based on the ideas of Dr. Shichida.

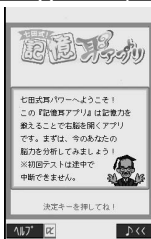

© SHICHIDA CHILD ACADEMY KANDOU SEIKATSU CLUB

### 1 Software List ▶ 記憶耳アプリ (Memory Ear Application)

- When “戻る” or another appears at the lower right of display, press [戻る] to adjust the sound volume.

### 2 Select a menu item.

トレーニング (Training) . . . . . Memorize numbers to train your retentive memory. Go to step 3.

耳パワー分析 (Hearing ability analysis)

. . . . . Saves the record of play data once a day. Go to step 3.

マイデータ (My data) . . . . . You can check the graph for the record up to the current point.

ヘルプ (Help) . . . . . Displays how to play the game or the explanation of the effect.

WEBサイトへ (WEB site) . . . . . Accesses to “七田式耳パワー (Shichida method hearing ability)” site. Displays how to play the game and other hearing training applications.

### 3 Select an item.

プレイする (Play the game) . . . . . Starts the game.

効果を確かめる (Confirm the effect) . . . . . Checks the effect of the game.

 
### 4 Use [戻る] to select a step.

#### Information

- You are separately charged a packet communication fee to connect to the web site.
- Note that the effect of training has its variation among people, and that it is not necessarily guaranteed.

## 旺文社漢検アプリ for P (Obunsha Kanji Test Application for P)

You can enjoy abundant questions of pre-level 2 of the Kanji Aptitude Test.

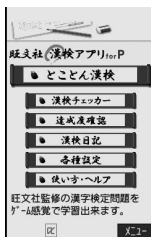

© Obunsha Co., Ltd  
© MTI. Ltd

“漢字検定” and “漢検” are trademarks of Japan Kanji Aptitude Testing Foundation.

### 1 Software List ▶ 旺文社漢検アプリ\_P (Obunsha Kanji Test Application for P)

### 2 Select a menu item.

とことん漢検 (Intensive kanji test)

. . . . . Do exercises of the pre-level 2 by genre.

漢検チェッカー (Kanji test checker)

. . . . . Check to see if you attain the pre-level 2 of the Kanji Aptitude Test.

達成度確認 (Confirm the achievement level)

. . . . . Check the number of your answers and the ratio of correct answers by genre.

漢検日記 (Kanji test diary)

. . . . . Check a proceeding state on the application program that is automatically recorded.

各種設定 (Respective settings)

. . . . . Make the game settings or reset the application.

使い方・ヘルプ (Guide/Help)

. . . . . Displays the explanation of the application and how to play it.

- You can display each setting and Help also by pressing [戻る] [メニュー].

### もじリスヘキサ (Mojiris Hexagon)

This is a word puzzle game to create words by shooting a character block into space and combining it with character blocks arranged beforehand. The created words are then erased.

Try to create as many words as possible so that the character blocks do not reach the bottom.

Two-to-four-character words can be erased.

For details, refer to “ヘルプ (Help)” in the menu.

© 2007 NBGI



## 1 Software List ▶ もじリスヘキサ (Mojiris Hexagon)

- You can adjust the sound volume by pressing (✖).
- You can select the item by pressing (□).
- You can select “ヘルプ (Help)” or “コンフィグ (Configuration)” by pressing (☰) (Xメニュー).

## 2 Press (□).

### Key operation for playing a game

- (□) ... Drops the character blocks. (☰) ... Suspends the game.
- (□) ... Shifts the gun sight to the right or left to shoot character blocks.
- (☰) ... Returns to the title display. (□) ... Shoots the character blocks.

### カウントダウントレイン-P (Countdown Train-P)

You can download the time schedule of trains, and can count down the departure time of the train you want to catch on a minute/second basis. The alarm function is also provided to notify you of 5 to 30 minutes before the departure. You can update the time schedule from the menu so the latest one is always available.

For details, refer to “ヘルプ (Help)” in the menu.



Powered by JR Travel Navigator

## 1 Software List ▶ カウントダウントレイン-P (Countdown Train-P)

## 2 Read “免責事項 (Exemption clause)” thoroughly

▶ (☰) (次へ) ▶ はい (YES)

## 3 (☰) (Xメニュー) ▶ 駅名入力検索 (Search by entering station name) ▶ Enter a station name ▶ (☰) (決定)

- You do not need to enter the whole station name.

## 4 Select a station name ▶ Select a line and destination

▶ (☰) (保存) ▶ はい (YES)

### Information

- You are separately charged a packet communication fee to store/update the time schedule data.

### 地図アプリ (Map Application)

“地図アプリ (Map Application)” is the i-appli program that enables you to use Open i-area for checking your current location, to see the map for the specified location, or to check the routes to your destination.

You can easily get transfer information by voice input.

- You are advised to subscribe to Pake-Houdai/Pake-Houdai Full service for using this software program.
- If you delete this software program and then when you want to resume it, download it from “i エリアー周辺情報 (i-area -Local Information-)”.
- This software program is the i-appli program that uses the mail function, so it is not available when the mode of 2in1 is set to B Mode.
- Note that we are not held responsible for the accuracy and promptness of the map and route information.
- While driving, ensure that a person other than the driver operates this software program.

### ■ Standard and optional services

The standard and optional services are available with this software program.

Standard service: Provided by DoCoMo (charge free).

Optional service: Provided by ZENRIN DataCom (charged).

You can use the optional services charge free except traffic information for up to 90 days from when you have started this software program for the first time. To use the optional services from 91 days on, you need to register yourself as a member of “ゼンリン 地図+ナビ (ZENRIN/map+navi)” (charged) provided by ZENRIN DataCom. Even when you register yourself as a member while you are using this software program, you do not need to re-download it. You can use the software program as it is.

Menu	Descriptions	Up to 90 days	From 91 days on
このあたりの場所 (Around here)	• You can use Open i-area to see the map for your current location or send the map by mail.	Free	Free
周辺を調べる (Check nearby area)	• You can check the details of shops, facilities, or iD member stores in the area where you are currently in or you specify, and can obtain coupons from gourmet information. • You can check nearby weather status or spare spaces in parking lots.	Free	Free
地図を見る (See map)	• You can enter a keyword, genre, address, or phone number to see the map. • You can check the points stored in this software program or on the server or check the map for the points retrieved by the previous search. • After the storage on the server, the stored points can be shared with your personal computer.	Free	Charged

Menu	Descriptions	Up to 90 days	From 91 days on
ルートを探す (Search for route)	<ul style="list-style-type: none"> <li>You can search for the route to the destination by vehicle, on foot, or by car.</li> <li>You can search for the route easily to your home you have stored.</li> </ul>	Free	Charged
乗換案内 (Transfer guide)	<ul style="list-style-type: none"> <li>You can check the train transfer guides and timetables.</li> <li>You can check the map for train routes and set an alarm before your departure.</li> </ul>	Free	Charged
おしゃべり検索 (Voice search)	<ul style="list-style-type: none"> <li>By voice input, you can easily check the details of your nearby area or see the map.</li> <li>By voice input, you can easily get transfer information.</li> </ul>	Free	Free
設定 (Settings)	<ul style="list-style-type: none"> <li>You can set how to show the map, and check how to use them.</li> </ul>	Free	Free

### ■「地図アプリ (Map Application)」TOP display and its operation

The respective menus are displayed on the TOP display. When you close the menu, the map retrieved by the last search appears.

- The displays are for reference, so the actual ones might differ.
- At the first start-up, the usage rules and caution items on use are displayed.

 


TOP display

### ◆When 91 days have passed without registering yourself as a member

At the first start-up on or after 91 days, the message telling that your privilege to use the functions is limited, and the message that refers to the member registration site appear. The same messages appear when you select a menu for optional services.

※To register yourself as a member, access "ゼンリン 地図 + ナビ (ZENRIN/map+navi)" via this software program.

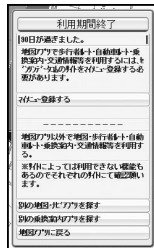

### ■ Map display and its operation

#### ◆Key operation when the map is shown

Key operation	Action
[メニュー (Menu)]	Shows the menu.
[Quick Access Menu Icon]	Shows the quick access menu.
[拡大縮小 (Enlarge/Reduce)]	Shows the scale bar. To enlarge the display, press [Enlarge]. To display the details, press [Reduce]. Press [閉じる (close)] to fix the scale and clear the bar.
[Move Map Icon]	Moves the map up, down, left, and right.
[CLR]	Closes the menu, or returns to the point retrieved by the first search.
[Left Arrow]	Turns the map to the left.
[North Arrow]	Turns the map northward.
[Right Arrow]	Turns the map to the right.



Map View display

© ZENRIN DataCom CO., LTD. 2007

#### ◆Key operation when the quick access menu is shown

Key operation	Action
[周辺を調べる (Check nearby area)]	Checks the details of the nearby area mainly on the displayed map.
[ココへのルート (Route here)]	Specifies the start point and searches for the route to the center of the map.
[ココを送信 (Send here)]	Sends the URL of the displayed map by i-mode mail.
[ココを登録 (Store here)]	Stores the location information of the center of the map in this software program or on the server. When you store it on the server, the stored point can be shared with your personal computer as well.
[地図へ (To map)]	Closes the quick access menu.
[1] パノラマ (Panorama)]	Shows the point from where panoramic images can be viewed. Select the point to display panoramic images.
[2] ビル/テナント (Building/Tenant)]	Shows the buildings around and can click to check the tenants in the buildings if any.

## ■ The Search Result display for the nearby area details and its operation

- The display is for reference, so the actual one might differ.
- The display and operation are for when you show the search result on the map, not for when you select it on the list.

## ◆ The Search Result display for the nearby area details

※ When the cursor is not placed over the shop retrieved by the search, the quick menu appears.

## ◆ Key operation when the Search Result display for the nearby area details is shown

Key operation	Action
	Confirms detailed information about search results.
	Moves the map up, down, left, and right.
	Re-searches the center area of the map being displayed.
	Shows the previous search results.
	Shows the next search results.
	Shows the menu.
	Shows the scale bar. To enlarge the display, press  and to display the details, press . Press  to fix the scale and clear the bar.



© ZENRIN DataCom CO.,LTD. 2007

## Searching for Routes to Destination

You can specify the start point and destination, and search for the route. The routes you can go through on foot, by public transportation, or by car are displayed.

## 1 Map View display [メニュー (Menu)] ▶ ルートを探す (Search for the route)

## 2 出発地 (Start point) ▶ Select a setting method.

### このあたり (Around here)

... Uses Open i-area to measure the approximate location and set it.

### フリーワード検索 (Keyword search)

... Searches and sets the start point by keywords.

### 地図上で指定 (Specify on map)

... Specify the start point on the map.

### TEL / 〒検索 (TEL/ZIP code search)

... Searches to set the start point by the phone number or zip code.

### 住所一覧から (From address list)

... Select the address to set the start point.

### ジャンルから (From genre)

... Select a genre to set the start point.

### 履歴から (From record)

... Set the start point on the map previously displayed.

## 登録地点から (From stored point)

... Set the start point from the location information stored in this software program or on the server.

## 自宅 (Home)

... Set the start point from the location information of your home.

## 出発地の確認 (Confirm start point)

... Confirm information about the start point.

## 3 目的地 (Destination) ▶ Set the destination by same operation as that of step 2.

## 4 時間指定 (Specify time) ▶ Select an item.

現時刻で指定 (Specify by current time) ... Searches for the route by the current time.

出発時刻指定 (Specify start time) ... Specifies the start time and searches for the route.

到着時刻指定 (Specify arrival time) ... Specifies the arrival time and searches for the route.

終電を利用 (Use last train) ... Searches for the route by the last train of the day.

## 5 条件設定 (Set conditions) ▶ Select conditions ▶ 上記で設定 (Fix as specified above)

### 乗換条件 (Transfer conditions)

... Select transfer condition from “早い (Fast)”, “安い (Cheap)”, and “楽々 (Easy)”.

### 徒歩ルート (Foot route)

... Select a foot route from “おまかせ (Free)”, “屋根多い (Many roofs)”, and “階段少ない (Less stairs)”.

### 特急利用 (Use special express)

... Select whether to use special expresses for even when the total distance is less than 100 km.

### 通常利用車種 (Ordinary type of vehicles)

... Select a type of vehicle.

## 6 ルートを検索 (Search for a route)

You can search for the route by “ で検索 (Search by )”

that searches for routes by all types of vehicles and on foot, or “ のみで検索 (Search by only )” that searches for routes only by car. Up to six routes are

displayed as search results. When the routes using different transportation are

found, the characteristics of the routes are displayed by the icons shown below:

早 (Fast): Arrival time is early. 安 (Cheap): Fare is cheap.

楽 (Easy): Transfer is less.

オススメ (Recommendable): Route provided with three conditions, “早 (Fast)”,

“安 (Cheap)”, and “楽 (Easy)”.

有料 (Charged): Route by car using toll roads

一般 (Ordinary): Route by car using ordinary roads

• To store the route, select “ルート登録 (Store route)”.

## 7 ルートを選択 (Select a route) ▶ ルート確認 (Confirm route)

• To confirm the route, select “ルート確認 (Confirm route)”.

• To check the timetable, select “時刻表 (Timetable)”.

## ■ Route (Car) display and its operation

• The display is for reference, so the actual one might differ.

### ◆ Key operation when a route is shown

Key operation	Action
[メニュー] (Menu)	Ends displaying the route and shows the TOP menu.
[ ]	Shows the quick access menu.
[拡大/縮小] (Enlarge/Reduce)	Shows the scale bar. To enlarge the display, press [ ], and to display the details, press [ ]. Press [閉じる] (Close) to fix the scale and clear the bar.
[ ]	Moves the map up, down, left, and right.
[CLR]	Returns to the current location.
[2]	Switches to intersection mode.
[*]	Turns the map to the left.
[O]	Turns the map northward.
[#]	Turns the map to the right.



Route (Car) View display

The route to the destination is displayed.

© ZENRIN DataCom CO.,LTD. 2007

### ◆ Key operation when the quick access menu is shown

Key operation	Action
[結果&設定] (Result&Settings)	Shows the search result of the route (time and fare, and others), or sets the route.
[経由地を設定] (Point setting)	Searches for the route by adding up to three points you go through to the destination.
[リルート] (Re-route)	Searches for the route from the current point to the destination again.
[リルート消去] (Clear route)	Clears the route being displayed.
[モード切替] (Switch mode)	Switches to the intersection mode.

## Using おしゃべり検索 (Voice search)

By voice input, you can easily check the details of your nearby area, get transfer information, or see the map from the voice search menu.  
Example: When using おしゃべり検索 (Voice search) to check the details of your nearby area

## 1 Top display ▶ おしゃべり検索 (Voice search)

### ▶ 周辺を調べる (Check nearby area)

How to input your voice is displayed.

## 2 Explanatory display for voice input

### ▶ 音声入力開始 (Start voice input)

The display for voice input appears. After the Voice Input display appears, speak Japanese about the details of nearby area you want to search.

Example: "Konoatari-no Konbini" (nearby convenience store)



A confirmation display appears after your voice is recognized.

When the recognition result is wrong, select "音声再入力(Re-input voice)".

## Using Settings and Help

## 1 Top display ▶ 設定 (Settings)

### ▶ 設定・ヘルプ (Settings/Help) ▶ Select an item.

Item	Action
会員情報確認 (Confirm registered information)	You can check whether you are registered as a member of "ゼンリン 地図+ナビ (ZENRIN/map+navi)".
α基本設定 (α Standard settings)	You can perform the overall settings of the software program such as specifying map display color or font size.
ルート検索設定 (Route search settings)	You can perform the overall settings of the route search.
自宅設定 (Home setting)	You can register the location of your home.
履歴系クリア (Clear records)	You can clear the records of the map or route used.
使い方の説明 / よくある質問 / 利用規約 (Explanation about how to use/FAQ/Usage rules)	You can get explanation about how to use, FAQ, and usage rules.

## 楽オク出品アプリ2 (Rakuoku Exhibition Application 2)

"楽オク出品アプリ2 (Rakuoku Exhibition Application 2)" enables you to easily exhibit your goods on Rakuoku whenever you want wherever you are. Even if you are a beginner, an instruction guides you through exhibition procedures, so you can use it easily. The convenient functions such as shooting/editing photos and saving records are available so that you can exhibit your goods in a shorter time than you do on sites.

- You need to agree with "利用規約 (Usage rules)" for the first time.
- You are separately charged a packet communication fee.
- For details on Rakuoku, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- To exhibit on Rakuoku, you need to register with the Rakuten membership and exhibitor membership.
- For the information about Rakuoku, refer to i-mode site.

i-mode site: ☎ Menu→楽オク -オークション- (Rakuoku -Auction-)

QR code for accessing the site



※ The display is for reference. The actual one may differ.

## FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)

"FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)" enables you to check whether the FOMA phone is available at the FOMA High-Speed Area.

- Use "FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)" with your consent to "ご利用の注意 (Cautions in use)".
- Depending on the communication environment (such as weather, radio wave conditions, network congestion state) at communication environment check, the different result or "out of service" might appear even in the same area or at the same period of time.
- You might not be able to check correctly if you use another function while using this application program.



※ The display is for reference. The actual one may differ.

## Gガイド番組表リモコン (G Guide Program List Remote-controller)

This is a convenient application program that bundles the TV program list and AV remote-controller function and the monthly charge is free.

Anytime and anywhere you are, you can easily obtain the terrestrial digital, terrestrial analog or BS digital TV program information for the desired time zone. You can know about titles, contents, and start/end times of TV programs. Further, you can start a One Seg program from the program list and vice versa.

If there is any program you want to watch, you can set timer recordings of the program on a DVD hard disk recorder over the Internet. (You need to have a DVD hard disk recorder that supports the remote timer recording function. And you need to perform initial settings of this application program.) Further, you can search for the program information by keywords such as program genres or celebrities you like. You can also remote-control a TV, video recorder, and DVD player. (Some models are not supported.)

- See "Using Infrared Remote-controller Function" on page 329 for details on the infrared remote-controller.
- You need to make the initial settings and to agree with the usage rules for the first time.
- You are separately charged a packet communication fee.
- To use this application program overseas, set the date/time for the FOMA phone to Japan time.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You cannot delete "Gガイド番組表リモコン (G Guide Program List Remote-controller)".
- "Gガイド番組表リモコン (G Guide Program List Remote-controller)" is a mail-linked i-oppli program, so you cannot use it in B Mode of 2in1.



※ The display is for reference. The actual one differs. Local programs according to your region appear on your display.

## iアプリバンキング (i-oppli Banking)

This is an i-oppli program that enables you to conveniently use mobile banking. Mobile banking enables you to use your FOMA phone to check the account balance, check the deposits/withdrawals, and transfer/shift money whenever you want and wherever you are. By entering your specified password at the start of this application program, you can use the mobile banking services for up to two banks.

- To use mobile banking, you need to have the bank account and subscribe to the mobile banking service of each bank.
- You are separately charged a packet communication fee.
- For details on the i-oppli Banking, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- For the information about i-oppli Banking, refer to i-mode site.

i-mode site: ☎ Menu→メニュー/検索 (Menu/Search)→モバイルバンキング (Mobile Banking)→iアプリバンキング (i-oppli Banking)

QR code for accessing the site



※ The display is for reference. The actual one may differ.

## About program booking function

You can select and book a program you want to watch from the program list of this application program.

### How to book programs

1. Software List▶Gガイド番組表リモコン (G Guide Program List Remote-controller)
  - ▶ Highlight a program to be set and press **(iD)** (**X1-1**)
  - ▶ 視聴予約 (Book program)▶ 予約実行 (Execute Booking)
  - ▶ Follow the instructions on the display.

## About timer recording function

You can select a program you want to record and set a timer recording from the program list of this application program.

### How to set a timer recording

1. Software List▶Gガイド番組表リモコン (G Guide Program List Remote-controller)
  - ▶ Highlight a program to be set for a timer recording and press **(iD)** (**X1-1**)
  - ▶ #ワンセグ録画予約 (One Seg timer recording)▶ 予約実行 (Execute Booking)
  - ▶ Follow the instructions on the display.(You can set a timer recording also by highlighting a program and pressing **(#)**.)

## About remote timer recording function

If you have a DVD hard disk recorder that supports the remote timer recording function, you can set timer recordings from the program list of this application program over the Internet even if you are away.

For remote timer recording, you need to make initial settings of this application program.

### How to make initial settings

1. Set the Internet connection for the DVD hard disk recorder.  
(Refer to the instruction manual of the DVD hard disk recorder you use.)
2. Software List▶Gガイド番組表リモコン (G Guide Program List Remote-controller)
  - ▶ **(iD)** (**X1-1**)▶ リモート録画予約 (Remote timer recording)
  - ▶ Operate following the guidance.

### How to set timer recordings

After the initial settings, specify your desired program and select “リモート録画予約 (Remote timer recording)”. Then, the DVD hard disk recorder specified on this application program is connected via the Internet, and you can set timer recordings.

- You are separately charged a packet communication fee.

## iD設定アプリ (iD Setting Application)

Chargeless electronic money “iD” is a service that enables you to do shopping by placing your Osaifu-Keitai or a credit card with “iD” mounted over a scanning device. You can do shopping easily and conveniently without signing. Depending on the card publishing company, cashing is also supported.

- For using “iD”, you need to subscribe to a card publishing company that supports “iD” as well as to have Osaifu-Keitai on which specified settings have been completed by the iD application program and card application program provided by the card publishing company, or a credit card on which “iD” is mounted.
- When you use “iD” on Osaifu-Keitai, start the iD application program, agree with “ご利用上の注意 (Caution in use)”, and then complete the specified settings at the iD application program end. Then download or start the card application program, and perform the specified settings at the card application program end.
- The expense (annual fees, etc.) charged for the iD service differs depending on the card publishing company.
- You are charged a packet communication fee for downloading the iD application program, and the card application program.
- For the information about “iD”, refer to the i-mode site of “iD”.  
i-mode site: **(iD)** Menu→メニュー／検索 (Menu/Search)→「iD」



※The display is for reference.  
The actual one may differ.



QR code for  
accessing the site

## DCMXクレジットアプリ (DCMX Credit Application)

“DCMX” is a credit service that supports “iD” and offered by NTT DoCoMo Group. DCMX provides DCMX mini that enables you to use up to ¥10,000 per month and respective DCMX services that enable you to use more amount and save up DoCoMo points.

With “DCMX mini”, you can easily make a subscription from this application program and immediately use Mobile Phone Credit.

※The display is for reference.  
The actual one may differ.



## Subscribing for membership/Screening ※1

## Setting card information

### Use

No troublesome deposit is required! Just by placing the setup completed mobile phone over the scanning device at a shop, you can enjoy shopping without signing※3.

### Check ※2

You can check, on the application program, the balance for the current month and detailed account!

### Change

When updating your card or changing models, you can apply from the application program.

- ※1 The online screening is conducted at your subscription for DCMX mini. For subscribing to a service other than "DCMX mini", you are connected to the subscription page for i-mode.
- ※2 The checking function for usage status and others is available for "DCMX mini" only.
- ※3 You might be required to enter your pin number under certain conditions.

- For service contents and details of subscriptions, refer to the i-mode site of DCMX.

· i-mode site:  Menu→DCMX iD

QR code for  
accessing the site



## Information

- To start this application program for the first time, you need to agree with "ご利用上の注意 (Cautions in use)".
- You are charged a packet communication fee for settings and operations.


 
### ■ Cautions on Osaifu-Keitai compatible i-αpli

Note that we take no responsibility for any information set on your IC card.

<  αpli Settings >

## Setting i-αpli

- 1  i-αpli  αpli settings  
▶ Do the following operations.

Item	Operation/Explanation
<b>Auto start setting</b>	See page 241.
<b>Disp. software info</b>	See page 229.
<b>Preferred tone</b>	You can set which sound to be output preferentially, from MUSIC or i-αpli program, for when you start an i-αpli program during music playback. ▶ <b>MUSIC</b> or  <b>αpli</b>
<b>αBacklight</b>	You can set the backlight operation for when an i-αpli program is running. ▶ <b>Select an item.</b> <b>Depend on system</b> . . . . Follows the setting of "Backlight". <b>Depend on software</b> . . . . Follows the setting of each software program. <b>Constant light</b> . . . . . Lights constantly.
<b>αPower saver</b>	You can set to Power Saver Mode to decrease battery consumption by suspending the i-αpli program temporarily for when you close the FOMA phone during i-αpli running. ▶ <b>ON or OFF</b> • This setting is valid from when an i-αpli program starts until it closes. • Even when this function is set to "ON", Power Saver Mode becomes invalid if "Power saver" that can be set for each i-αpli program is set to "OFF".
<b>αVibrator</b>	You can set the vibrator operation for when an i-αpli program is running. ▶ <b>Depend on system or Depend on software</b> <b>Depend on system</b> . . . Does not work regardless of the setting of "Vibrator". With some software programs, the vibrator works. <b>Depend on software</b> . . . Follows the setting of each software program.
<b>Check settings</b>	You can check each of "  αpli settings".

## Information

<αBacklight> <αVibrator>

- With some software programs, the backlight and vibrator settings are “OFF”. Consequently, if you set “Depend on software”, the backlight and vibrator will not work; if you want them to work, set “Depend on system”.

## Starting i-αppli Automatically

You can make an i-αppli program start automatically at the set date and time. Set the date and time for automatic start using Auto Start Time.

### Auto Start Setting

You can set whether to enable automatic start of i-αppli programs.

- 1 > i-αppli > > Auto start setting > ON or OFF

### Auto Start Time

You can set the date and time for automatic start. You can set for up to three software programs.

- 1 Software List/IC Card List (FUNC) > Auto start time
- 2 Put a check mark for an item to be set (Finish)
  - Time interval set . . . Starts at an interval specified by the software program. The setting is completed.
  - Start time set . . . . . Starts at the set start time automatically.
- 3 Select start time > Enter the date and time to be set.
- 4 1 time > Select a type of repeat.
  - If you select “1 time”, the automatic start is not repeated.
  - If you select “Weekly”, put a check mark for days of the week to be set and press (Finish).
- 5 Press (Finish).

## Auto Start Info

You can check whether a software program has started automatically and properly. Also, you can check the information of start failure from IC card. Up to three records of automatic start, a record of automatic start set by i-αppli, and a record of start failure from IC card are stored.

- 1 > i-αppli > > Auto start info

- StartO . . . . Started automatically and properly.
- StartX . . . . Did not start automatically. When “Start” is displayed, you can press (Start) to start the software program.
- Start- . . . . Has not started yet.

## Information

- Software programs do not start automatically in the following cases:
  - When the FOMA phone is turned off
  - When the date and time are not set
  - When another function is working
  - During Lock All
  - During Personal Data Lock
  - During playback of animations/Flash movies
  - When the time set for automatic start is identical to the reserved time set for “Software update”, or the time set for an alarm of “Alarm”, “Schedule” or “ToDo”, “Book program” or “Timer recording”
  - When a start time has been specified to the same software program within 10 minutes from the previous auto-start
- If automatic start fails, “ ” appears on the desktop. Select the icon to bring up the Auto Start Info.

## <i-αppli Stand-by Display>

## Operating i-αppli Stand-by Display

### Software Setting (Stand-by Set)

You can set an i-αppli program for the Stand-by display. Once set, the i-αppli Stand-by display automatically appears each time you bring up the Stand-by display.

- 1 Software List/IC Card List (FUNC) > Software setting > Stand-by set > ON or OFF > (Finish)

“ ” is displayed for the software program set as the Stand-by display.

“ ” or “ ” is displayed while an i-αppli Stand-by display is running.

## To operate an i-**appli** program as a normal i-**appli** program when an i-**appli** Stand-by display is running

From the i-**appli** Stand-by display, press **(CLR)**.

"**[i-APPLI]**" or "**[i-APPLI]**" changes to a blinking "**[i-APPLI]**" or "**[i-APPLI]**" and then you can operate the i-**appli** program as a normal one.

- To return to the i-**appli** Stand-by display, press and hold **(CLR)** for at least one second or press **(END)**; then select "Ended". To release the i-**appli** Stand-by display, select "Terminated", and select "YES".

### Information

- If you turn off the FOMA phone while the i-**appli** Stand-by display is running, the confirmation display appears asking whether to start the i-**appli** program when you turn on the power again.
- You can set only one software program for the i-**appli** Stand-by display.
- Some i-**appli** programs cannot be set for the Stand-by display.
- With some software programs set as the i-**appli** Stand-by display, you can press a key to go from the normal i-**appli** status to the i-**appli** Stand-by display status. However, you cannot return to the i-**appli** Stand-by display if another menu function is running.
- Note that you might not be able to receive timely information if you have set "Software setting (Stand-by net)" to "OFF".
- You cannot use the Web To function and the Phone To/AV Phone To function from the i-**appli** Stand-by display.
- If the software program which connects to the network is set for the i-**appli** Stand-by display, it might not operate successfully because of radio wave conditions or other factors.
- When you bring up the Stand-by display while a menu function is operating, the image set for "Stand-by display" of "Display setting" will be displayed, even when the i-**appli** Stand-by display is set.
- When communicating frequency is extremely high in a certain period of time while an i-**appli** program is running as the i-**appli** Stand-by display, the confirmation display appears. When you press **(CLR)**, the confirmation display appears asking whether to continue communication.
- If you set Lock All or Personal Data Lock when the i-**appli** Stand-by display is shown, the i-**appli** Stand-by display will end. If you set Lock All, the image set for "Stand-by display" of "Display setting" will be displayed and if you set Personal Data Lock, the default Stand-by display will be displayed. The i-**appli** Stand-by display will return when you release each lock.

## Software Setting (Stand-by Net)

You can set whether to permit communication for when the i-**appli** Stand-by display is running.

**1** **Software List/IC Card List** **(FUNC)**  
**▶ Software setting ▶ Stand-by net ▶ ON or OFF** **(Finish)**

## End Stand-by Display

You can temporarily end the running i-**appli** Stand-by display. Also, you can release the i-**appli** Stand-by display.

**1** **(MENU) ▶ Settings ▶ Display ▶ Display setting**  
**▶ Stand-by display ▶ End i-**appli** display**  
**▶ End or Terminate**

- When you select "Terminate", select "YES".

## End Stand-by Info

When the i-**appli** Stand-by display does not end successfully, you can check the date/time and its reason.

**1** **(MENU) ▶ i-**appli** ▶ i-**appli** info ▶ End stand-by info**

- When "**FUNC**" is displayed on the End Stand-by Info display, press **(FUNC)**, and select "Copy info" to copy the information. Select "Delete info", and select "YES" to delete the information.

## < i-**appli**(microSD)>

## Displaying i-**appli** Data Files on the microSD Memory Card

Depending on the i-**appli** program, you can save its data files on the microSD memory card.

You can display the i-**appli** data files saved on the microSD memory card.

**1** **(MENU) ▶ i-**appli** ▶ i-**appli**(microSD) ▶ i-**appli**(microSD)**

## Function Menu while i-**appli** Data File is Displayed

Function menu	Operation/Explanation
Folder info	You can display the information of the software program that uses the selected folder, available/unavailable for folder usage, and the reason if unavailable.
Delete folder	You can delete the selected folder and files in the folder. <b>▶ Enter your Terminal Security Code ▶ YES</b>