 


# i-appli

<b>What is i-appli?</b> .....	<b>294</b>
<b>Downloading i-appli from Sites</b> .....	<b>295</b>
<b>Starting i-appli</b> .....	<b>296</b>
<b>Starting i-appli Automatically</b> .....	<b>307</b>
<b>Operating i-appli Stand-by Display</b> .....	<b>307</b>
<b>Setting Lights and Vibrators for when Running i-appli</b> .....	<b>308</b>
<b>Displaying i-appli Data Files inside miniSD Memory Card</b> .....	<b>309</b>

## What is i-appli?

By downloading i-appli from i-mode sites, you can make full use of your FOMA phone supporting i-mode (i-mode phone). For example, you can enjoy various games downloaded to your i-mode phone, and can automatically check the stock prices at regular intervals once you have downloaded i-appli for stock price information. In addition, you can download only the necessary data of map i-appli so that you can scroll it smoothly. You can also use the i-appli which enables you to directly store the data into the Phonebook or Schedule, or the i-appli which links to Data Box, enabling you to save or obtain images.

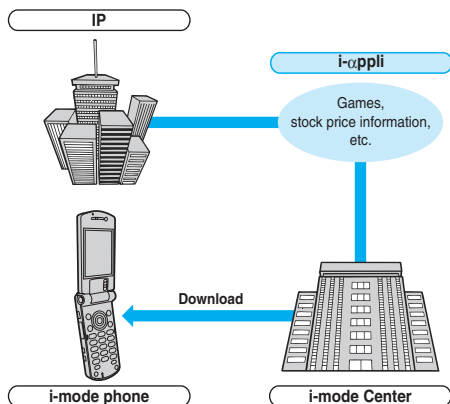

- See page 295 for downloading i-appli.
- See page 296 for running i-appli.
- See page 307 for running i-appli automatically.
- The serial number of your i-mode phone/UIM may be used depending on the software.
- Some software programs do communication when they are started; you can set them not to communicate.

### ■ Using stored data

Some i-appli programs can refer to, store, and operate the data in your i-mode phone (Phonebook entries, bookmarks, schedule events, images and icon information).

The i-appli programs can do followings by using the stored data:

- Store Phonebook entries
- Use icon information
- Save to Bookmark
- Store schedule events
- Retrieve images from Data Box
- Save images to Data Box
- Save ToruCa files
- Use miniSD memory card

## What is i-appli DX?

i-appli DX enables you to use i-appli in a more convenient and pleasurable way. By linking to i-mode phone's information (mail, dialed call records/received call records/redial items, and Phonebook entries), you can compose a mail message on the display where your favorite graphic character appears, or make the graphic character tell you who the caller of an incoming call is. By linking to mail, your desired information such as the stock price, or the progress of games can be updated in real time.

### ■ Using stored data

Some i-appli DX programs can refer to, store, and operate the data such as mail messages, redial items, received call records, and ring tones in addition to the stored data (Phonebook entries, bookmarks, schedule events, images, and icon information) which ordinary i-appli can use. The i-appli DX programs can do followings by using the stored data:

- Store Phonebook entries
- Refer to the Phonebook
- Use icon information
- Save to Bookmark
- Store schedule events
- Use Mail Menu
- Use the i-mode Mail Composition display
- Refer to the latest redial item
- Refer to the latest received call record
- Refer to the latest unread mail
- Save ring tones
- Change ring tones (for calls, mail, messages)
- Retrieve images from Data Box
- Save images to Data Box
- Change display settings (for the Stand-by display, Dialing/Receiving display, Mail Sending/Receiving display, Message R/F Receiving display)
- Use the miniSD memory card
- Store a new ToruCa file, or select or obtain ToruCa files
- i-appli DX might do communication to confirm the validity of software regardless of the communication settings of the software.

Communication frequencies and timing vary depending on the software.

- You need to set "Set time" to start up i-appli DX.

## What is Mail-linked i-appli?

Mail-linked i-appli is a type of i-appli DX, enabling you to use i-appli in a more convenient and pleasurable way. By exchanging information via i-mode mail, your desired information such as the stock price or the progress of games can be updated in real time.

- i-appli mail running under mail-linked i-appli may not be displayed correctly.

## What is Osaifu-Keitai compatible i-appli?

By using Osaifu-Keitai compatible i-appli, you can read/write the data inside the IC card and use convenient functions such as downloading electronic money or traffic tickets, or checking your account for the balance and usage details on the mobile phone.

- If you use Osaifu-Keitai compatible i-appli, the information on the IC card is transmitted to the IP (Information Provider) you have signed up for.
- See page 316 for Osaifu-Keitai.

## Other things you can do

### ■ i-appli Stand-by display

You can set i-appli for the Stand-by display so that you can receive mail or make calls from the i-appli Stand-by display. You can also set the i-appli Stand-by display more convenient; it enables you to display the latest information about news or weather forecast, or to bring up your desired graphic characters that notifies you of incoming mail or alarm. (See page 307)

- They are the functions that can be used under the software supporting the i-appli Stand-by display.

### ■ i-appli auto start

You can auto-start the software programs by specifying the date, time, and the day of the week. Some software programs can be auto-started at the time intervals set in them. (See page 307)

### ■ Shooting with a camera

You can take a picture using the i-mode phone's camera from the software.

- This is a function that can be used under the software supporting the camera shooting function.

### ■ Infrared Exchange

With some software programs, you can communicate with the devices having the infrared exchange function. i-appli now has a wide variety of usage by linking to those devices. (See page 359)

- This function can be used under the software which supports the infrared exchange function.
- You might not be able to exchange data with some devices, even when they have the infrared exchange function.

## ■Infrared remote-controller

With some software programs, you can operate various devices such as home electronic appliances supporting the infrared remote-controller. (See page 304)

For instance, you can use the pre-installed “Gガイド番組表リモコン (G Guide Program List Remote Controller)” as the AV remote controller that synchronizes with a TV program list. (See page 304)

- This function can be used under the software which supports the infrared remote-controller. You need to have the software compatible with target devices.

 
## <i-oppli Download>


### Downloading i-oppli from Sites


You can download software from sites to the FOMA phone.

You can store from 10 to 200 downloaded software programs. (The actual number of savable software programs may decrease depending on the data size.)

- 1 Bring up an i-oppli downloadable site▶ Select a software program▶ 

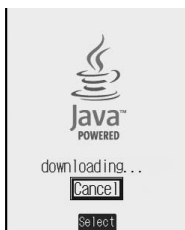

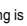

- 2 Press  when downloading ends.

- When downloading ends, the display for Software Setting (Network Set, Stand-by Set, or Stand-by Net) might come up. Press  (Finish) after setting is completed. These settings can be done also from the Software List.

- 3 YES or NO

YES . . . . Launches i-oppli.

NO . . . . Returns to the site display.


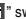

- When software launches, “” or “” appears at the lower part of the display.

## ■When software programs are stored to the maximum

When the maximum number of software programs is stored or there is not enough memory, the confirmation display appears asking whether to delete unnecessary software programs to save new ones.

1. YES▶ Put a check mark for the software programs to be deleted

▶  (Finish)▶ YES

-  and “” switch each time you press .

- Continue checking items until “Finish” appears at the lower left of the display.

- See page 299 for deleting mail-linked i-oppli.

- Software is not saved if downloading fails because of radio wave conditions.

## ■Downloading mail-linked i-oppli

When you download mail-linked i-oppli, each i-oppli mail folder is created automatically in the Inbox/Outbox Folder List. The name of the folder is the same as the title of the downloaded mail-linked i-oppli, and cannot be changed.

You can save up to five mail-linked i-oppli programs.

- You cannot download the software if the mail-linked i-oppli using the same folder is already in the Software List.
- You cannot download mail-linked i-oppli while Mail Security is set.
- You cannot download mail-linked i-oppli if the Inbox/Outbox Folder List contains five i-oppli mail folders.

## ■Reloading mail-linked i-oppli

You can use an existing i-oppli mail folder when downloading mail-linked i-oppli whose folder only remains. If you do not use the existing i-oppli mail folder, delete the folder and create a new i-oppli mail folder. You cannot download mail-linked i-oppli without creating a new folder.

### To use the existing i-oppli mail folder

1. The confirmation display asking whether to use the folder▶ YES

### To delete the existing folder and create a new i-oppli mail folder

1. The confirmation display asking whether to use the folder▶ NO
2. The confirmation display asking whether to create a folder▶ YES

## Information

- “i-oppli mail” is the mail sent and saved by mail-linked i-oppli and mail received for mail-linked i-oppli. i-oppli data is set for i-oppli mail so that i-oppli mail is automatically saved to the i-oppli mail folder.

## Information

- You can download i-oppli pre-installed in your FOMA phone from the "P-SQUARE" site.

Menu→メニューリスト (Menu List)→ケータイ電話メーカー (Mobile Phone Maker)→P-SQUARE



QR code for accessing the site

- Downloading is not available at some accessed sites.
- Some i-oppli software programs can automatically connect to the i-mode Center after they are downloaded. However, to use this service, you need to set it in advance in "Software setting (Network set)".
- "i" appears at the top of the display while software information or software is being downloaded from SSL pages.
- The default for "Disp. software info" is "Not display". If you set this to "Display", you can check the software information before downloading it. When you press from the confirmation display for software information, another confirmation display appears asking whether to download the software. Select "YES".
- At downloading, the confirmation display might appear for asking whether to send the "serial number of your mobile phone/UIIM". Select "YES" to start downloading. In this case, the "serial number of your mobile phone/UIIM" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IPs (Information Providers) by this operation.
- At downloading, the confirmation display might appear asking whether to allow the i-oppli to use the data stored in the FOMA phone or the miniSD memory card. Select "YES" to start downloading.
- If you attempt to re-download the software that was downloaded with a different UIIM, the confirmation display appears asking whether to overwrite the software. With the Osaifu-Keitai compatible i-oppli, the confirmation display appears to tell that the data on the IC card is to be overwritten. Select "YES" to start downloading. When downloading ends, the software program that was downloaded using a different UIIM and the data items on the IC card are deleted.
- You cannot download some software programs while the IC card function is working or IC Card Lock is set.
- There is a software program that launches as soon as it is downloaded. This software is downloaded but not saved. When you end the software, the confirmation display appears asking whether to save it. Select "YES" or "NO".
- Some software programs which launch as soon as downloaded cannot be saved.
- Depending on the data volume inside the IC card, you might not be able to download Osaifu-Keitai compatible i-oppli even if there is still available space for software storage. Delete the displayed software following the confirmation display, and then download it again. (Some software might not be targeted for deletion, depending on the software to be downloaded.)  
Depending on the software program, you need to launch it and delete data inside the IC card before deleting the software itself.
- You can save up to 100 Kbytes per i-oppli.
- The 3D polygonal<sup>※</sup> engine enables cubic images to be displayed in i-oppli.  
※By combining polygons, a deep, cubic image is displayed.

## Display Software Info

Setting at purchase    Not display

You can display software information when downloading i-oppli.

- i-oppli settings**  
**Disp. software info**

### <i-oppli Launch>

#### Starting i-oppli

- Stand-by display** (for at least one second)



- You can display the Software List also by **Software list (phone)**.
- You can display the Software List inside the miniSD memory card by **i-oppli (miniSD)** **SW list (miniSD)**.
- If you have set "Software setting (Network set)" to "Check every start", the confirmation display might appear asking whether to use network communication. Select "YES" or "NO".
- The confirmation display appears asking whether to allow the i-oppli DX to use the FOMA phone's information and functions while i-oppli DX is being launched or running. Select "YES" or "NO".
- ""/" or ""/" is displayed while i-oppli is running.
- To end i-oppli, press and hold for at least one second or press ; then select "YES".

## Bring up IC Card List

You can bring up the Osaifu-Keitai compatible i-oppli list.

- IC card content**



- Select a software program and press to launch it.
- The software program launched last time comes at the top of the list. You cannot manually change the order of software programs.


**■ To launch another software from the current software**

With some software programs you can launch the specified i-oppil programs and enjoy them without returning to the Software List. For some software programs, the software programs to be launched has been specified, and for others not.

**When software to be launched is specified**

While i-oppil is running, the confirmation display appears asking whether to launch specified software. Select "YES".

**When software to be launched is not specified**

When software to be launched is not specified, you need to select the software. While i-oppil is running, the confirmation display appears asking whether to select software. Select "YES", select the software and press .

**Information**

- If the specified software is not in the Software List, you need to download it.

**■ When software malfunctions**

You can check the details when software malfunctions.

1.                    

## Software List



The following items appear in the Software List:

### 1 Title

i-appli title

### 2 Auto Start

Indicates that Auto Start is set.

### i-appli Stand-by display

Indicates that the software is set as the i-appli Stand-by display.

### Auto Start and i-appli Stand-by displays

Indicates that the software is set as the i-appli Stand-by display and Auto Start is set.

### OK for setting

Indicates that you can set the software as the i-appli Stand-by display.

### UIM execution restrictions

Indicates that the contents have been downloaded or upgraded by using a different UIM.

### 3 SSL

Indicates that the contents have been downloaded from an SSL page.

### 4 Osaifu-Keitai compatible i-appli

#### i-appli DX

#### Mail-linked i-appli

## Information

- The software launched last is displayed on the first line. You cannot sort the order of the software programs manually.

## Function Menu of the Software List/ IC Card List

### 1 Software List/IC Card List (FUNC)

Do the following operations.

Function menu	Operation/Explanation
<b>Set i-appli To</b>	<p>You can set whether to launch i-appli from sites or mail. You can also set whether to launch i-appli when you place the FOMA phone over an IC card compatible scanning device (reader/writer). You can set this for each software.</p> <p>▶ <b>Put a check mark for the items to be set</b></p> <p>Site "i-appli To"</p> <p>..... Launches i-appli from the site containing links for launching i-appli.</p> <p>Mail "i-appli To"</p> <p>..... Launches i-appli from the mail message containing links for launching i-appli.</p> <p>Ir "i-appli To"</p> <p>..... Launches i-appli from the external device by receiving infrared data for launching i-appli.</p> <p>Bar code "i-appli To"</p> <p>..... Launches i-appli from the bar code for launching i-appli.</p> <p>IC-Card "i-appli To"</p> <p>..... Launches i-appli from the IC card.</p> <p>• " " and " " switch each time you press .</p> <p>• Some items might not be set depending on the software.</p>
<b>Auto start time</b>	You can set the date and time for Auto Start. (See page 307)
<b>Software setting (Stand-by set)</b>	You can set the software as the i-appli Stand-by display. (See page 307)
<b>Software setting (Network set)</b>	<p>You can set whether to communicate while i-appli is running.</p> <p>▶ <b>Network set ▶ ON, OFF or Check every start</b></p> <p>• If you select "Check every start", you can check whether to permit the i-appli to connect to the network each time you launch it.</p> <p>▶ (Finish)</p>
<b>Software setting (Stand-by net)</b>	You can set whether to communicate while the i-appli Stand-by display is running. (See page 308)
<b>Software setting (Icon info)</b>	<p>You can set whether to permit the i-appli to use information of icons for the i-mode mail, SMS messages, Messages R/F, battery level, Manner Mode and for service area/out of service area.</p> <p>▶ <b>Icon info ▶ ON or OFF ▶ (Finish)</b></p>

Function menu	Operation/Explanation
<b>Software setting</b> (Change mld/img.)	<p>You can set whether to permit the i-oppli to change the setting for ring tones or the Stand-by display. This function is available only for i-oppli DX.</p> <p>▶ <b>Change mld/img.</b> ▶ <b>ON, OFF or Check every change</b></p> <ul style="list-style-type: none"> <li>● If you select "Check every change", you can confirm whether to permit i-oppli to change the settings for ring tones and Stand-by display each time.</li> </ul> <p>▶  (Finish)</p>
<b>Software setting</b> (See P.book/hist.)	<p>You can set whether to permit the i-oppli to refer to the Phonebook, Redial, and Received Calls. This function is available only for i-oppli DX.</p> <p>▶ <b>See P.book/hist.</b> ▶ <b>ON or OFF</b></p> <p>▶  (Finish)</p>
<b>Software setting</b> (View ToruCa)	<p>You can set whether to permit the i-oppli to refer to the ToruCa file. This function is available only for i-oppli DX.</p> <p>▶ <b>View ToruCa</b> ▶ <b>ON or OFF</b> ▶  (Finish)</p>
<b>Software desc.</b>	<p>You can display the software name and version of the i-oppli.</p> <ul style="list-style-type: none"> <li>● Use  to scroll the display to check the information.</li> </ul>
<b>Upgrade</b>	<p>You can upgrade the version of the software.</p> <p>▶ <b>YES</b></p>
<b>Add desktop icon</b>	<p>You can paste the software to the desktop. (See page 165)</p>
<b>Delete</b>	<p>▶ <b>YES</b></p> <ul style="list-style-type: none"> <li>● A confirmation display appears asking whether to delete for the software that has been set as the Stand-by display or set for Auto Start.</li> </ul>
<b>Delete selected</b>	<p>▶ <b>Put a check mark for the software programs to be deleted</b> ▶  (Finish) ▶ <b>YES</b></p> <ul style="list-style-type: none"> <li>● <input type="checkbox"/> and <input checked="" type="checkbox"/> switch each time you press . You can check or uncheck all items by pressing  (FUNC) and selecting "Select all/Release all".</li> <li>● If there is the software that has been set as the Stand-by display or set for Auto Start, the confirmation display appears asking whether to delete the software.</li> </ul>
<b>Delete all</b>	<p>▶ <b>Enter your Terminal Security Code</b> ▶ </p> <p>▶ <b>YES</b></p> <ul style="list-style-type: none"> <li>● If there is the software that has been set as the Stand-by display or set for Auto Start, the confirmation display appears asking whether to delete the software.</li> </ul>
<b>Move to miniSD</b>	<p>You can move the software to the miniSD memory card.</p>
<b>Move to UIM</b>	<p>You can move the software from the miniSD memory card to the FOMA phone.</p>

### Information

#### <Software setting (Icon info)>

- When you set "Software setting (Icon info)" to "ON" for the i-oppli Stand-by display, the icon information for unread mail/message, battery level, Manner Mode, radio wave strength and out of service area can be sent to the IP (Information Provider) over the Internet in the same way as the serial number of your mobile phone/UIM, and can be deciphered by third parties.
- When the software needs "Software setting (Icon info)", the software might not run if "OFF" is selected.

### Information

#### <Software desc.>

- You cannot change the name of the i-oppli software displayed in "Software desc.".

#### <Upgrade>

- When the software has been updated at launching, you can automatically update that software.
- When there is not enough memory, the confirmation display appears asking whether to delete unnecessary software programs and save new ones. (See page 295)
- At upgrading, the confirmation display might appear asking whether to send the "serial number of your mobile phone/UIM". Select "YES" to start updating. In this case, the "serial number of your mobile phone/UIM" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IPs (Information Providers) by this operation.
- You cannot update the mail-linked i-oppli in the following cases:
  - While details of the corresponding i-oppli mail folder are displayed
  - While Mail Security is set
  - When Mail Security is set for the corresponding i-oppli mail folder

#### <Move to miniSD>

- On other models, you might not be able to launch the software that was moved to the miniSD memory card.

### ■ When you delete mail-linked i-oppli



For "Delete"

When deleting mail-linked i-oppli, you can select whether to delete the automatically created i-oppli mail folders. If just the folders are left, you can check the text of mail from the Inbox/Outbox List.

1. Do the operation for "Delete", "Delete selected" or "Delete all".
  - YES . . . . . Deletes both the software program and the i-oppli mail folder.
  - NO . . . . . Does not delete the i-oppli mail folder; deletes the software only.
  - Cancel . . . . . Does not delete both the software and i-oppli mail folder; the former display returns.

### Information

- When the i-oppli mail folder contains protected mail, you cannot delete both the software and the folder even if you select "YES".
- You cannot delete the i-oppli mail folder in the following cases:
  - While displaying details of the folder
  - While Mail Security is set
  - While the folder is set with security
  - When the folder contains protected mail

### ■When you delete an i-oppai program whose data files are on the miniSD memory card



When you delete an i-oppai program whose data files are on the miniSD memory card, you can select whether to delete those files.

1. Perform the operation of "Delete", "Delete selected", or "Delete all".  
 YES . . . . . Deletes both the software and files on the miniSD memory card. Press "YES" again on the confirmation display. You need to enter your Terminal Security Code to execute "Delete" or "Delete selected".  
 NO . . . . . Does not delete the files on the miniSD memory card but deletes the software only.  
 Cancel . . . . . Does not delete both the software and files on the miniSD memory card, and the former display returns.

### ■When you delete Osaifu-Keitai compatible i-oppai

When deleting the Osaifu-Keitai compatible i-oppai, the confirmation display appears asking whether to delete the data on the IC card. Select "YES".

#### Information

- You might not be able to delete the Osaifu-Keitai compatible i-oppai unless you delete the data inside the IC card after launching the Osaifu-Keitai compatible i-oppai.
- You might not be able to delete the Osaifu-Keitai compatible i-oppai while the IC card function is working or IC Card Lock is set.

### ■Setting of pre-installed i-oppai software

Software setting	2006 FIFA ワールドカップドイツ大会 (2006 FIFA World Cup Germany)	ソニック・ ザ・ヘッジ ホッグ2 (SONIC THE HEDGE HOG 2)	ドット クリエイター (Dot Creator)	ケータイ コーディネー ター (Mobile Phone Coordi- nator)
Stand-by set	-	-	-	-
Network set	ON	ON	ON	ON
Stand-by net	-	-	-	-
Icon info	-	-	-	ON
Change mld./img.	Not available	Not available	Not available	ON
See P.book/ hist.	Not available	Not available	Not available	-
View ToruCa	Not available	Not available	Not available	-

Software setting	ポケモン パートナー (Poké- mate)	Gガイド番 組表リモコン (G Guide Program List Remote Controller)	電子マネー 「Edu」 (Electric Money "Edu")	ケータイ クレジット 「ID」 (Mobile Phone Credit "ID")	DCMX クレジット アプリ (DCMX Credit oppi)
Stand-by set	OFF	-	-	-	-
Network set	ON	ON	ON	ON	ON
Stand-by net	ON	-	-	-	-
Icon info	-	-	-	-	-
Change mld./img.	ON	-	-	-	-
See P.book/ hist.	ON	-	-	-	-
View ToruCa	ON	-	-	-	-



## Pre-installed i-oppli Software

The following i-oppli programs are pre-installed:

- You can delete i-oppli programs pre-installed in your FOMA phone.  
You can re-download the deleted i-oppli programs from the "P-SQUARE" site.  
If you use the UIM other than the one used for downloading, the UIM restrictions are activated. (See page 41)
- The re-download service is scheduled to close on April 30, 2010 for "2006 FIFAワールドカップドイツ大会 (2006 FIFA World Cup Germany)" and on May 31, 2010 for other i-oppli programs.
- The download service of additional data for i-oppli programs is scheduled to close on May 31, 2010 for "2006 FIFAワールドカップドイツ大会 (2006 FIFA World Cup Germany)" and on June 30, 2010 for "ソニック・ザ・ヘッジホッグ2 (SONIC THE HEDGEHOG 2)", "ドットクリエイター (Dot Creator)", "ゲートキーパーネーター (Mobile Phone Coordinator)", and "ポケメート(Poké-mate)".
- The re-download service and download service of additional data for i-oppli programs might be halted or closed without notice even in the service period.

### 2006 FIFA ワールドカップドイツ大会 (2006 FIFA World Cup Germany)



People in Japan and all over the world keep their eyes on the soccer festival held every four years "FIFA World Cup".  
You can enjoy playing the most impressive, exciting soccer game of the century.

© 2006 Electronic Arts Inc. Electronic Arts, EA, EA SPORTS and the EA SPORTS logo are trademarks or registered trademarks of Electronic Arts Inc. in the U.S. and/or other countries. All Rights Reserved. Official licensed product.

© The Official Emblem, the Official Mascots of the 2006 FIFA World Cup Germany™ and the FIFA World Cup™ Trophy are copyrights and trademarks of FIFA. All rights reserved. Produced under license by Electronic Arts Inc. Made in Japan. Player names and likenesses used under license from FIFA, International Federation of Professional Footballers ("FIFPro") and national teams. All sponsored products, company names, brand names, trademarks and logos are the property of their respective owners. EA SPORTS™ is an Electronic Arts™ brand.

## 1 Software List ▶ 2006FIFAWorldCup ▶

- When "▶" appears at the lower right of the display, press (F) to adjust the sound volume.

## 2 Select a menu ▶

2006 FIFA ワールドカップ (2006 FIFA World Cup)  
..... Challenge for the championship of 2006 FIFA World Cup with the team you like.  
Press (F) (サウンド) to change the grouping of teams. When there is any game that has been saved, select "LOAD GAME" to play its consecutive stage.

エキシビジョン (Exhibition)  
..... Select two teams you like and have a match between them. Press (F) (サウンド) to automatically fix the teams to match with.

オプション (Option)  
..... Adjust the sound volume and set a camera type, etc.

ヘルプ (Help) .. Explains how to operate.

ダウンロード (Download)  
..... Download the uniform and latest team data.

インフォメーション (Information)  
..... Access the web site.

クレジット (Credit)  
..... Displays the credit.

## 3 Select an item ▶

試合開始 (Kick off)  
..... Start a game.

チームマネジメント (Team management)  
..... Specify members and tactics.

ユニフォーム (Uniform)  
..... Change uniforms.

オプション (Option)  
..... Adjust the sound volume and set a camera type, etc.

カップ情報 (Cup information)  
..... Displays the information of group league and final 16, etc. This is displayed when "2006 FIFA ワールドカップ (2006 FIFA World Cup)" is selected.

メインメニューへ (To main menu)  
..... Return to step 2.

### About team management



Starting members

Substitutions

### メンバーチェンジ (Members change)

..... Change members and their positions.  
The information about the selected player is displayed at the left of the display.  
Press (F) to switch between the player's information and tactics.

### タクティクス (Tactics)

..... Change the formation and tactics.

### キープレイヤー (Key player)

..... Change the player for corner kick, free kick, or penalty kick, and the captain. The information about the selected player is displayed at the right of the display.

- Press (F) (DATA) to display the information about the opponent team.

## ソニック・ザ・ヘッジホッグ2 (SONIC THE HEDGEHOG 2)



© SEGA

Operate Sonic to prevent a mystic jewel "Chaos Emerald" from being stolen and the universe being conquered by Dr. Eggman who is trying to.

- This game consists of multiple stages, and only the first two stages are stored at the time of your purchase. When you complete the second stage, you can download the consecutive stages. You can download them also from "P-SQUARE" site.

## 1 Software List ▶ ソニックザヘッジホッグ2 (SONIC THE HEDGEHOG 2) ▶

- When "▶◀◀" appears at the lower left of the display, press to adjust the sound volume.

## 2 Select a menu ▶

ゲームスタート (Game start)

..... Select "最初から始める (From the start)" or "ステージセレクト (Stage select)".

Select "ステージセレクト (Stage select)" to select a stage and start the game. When there is any saved game, you can select "途中から始める (Continue)".

ゲーム説明 (Game's explanation)

..... Explains the game outline and operation.

ランキング (Ranking)

..... Browse rankings and high scores.

オプション (Option)

..... Adjust the level of the game and sound volume.

### ■ Key operation while playing a game

When Sonic comes in contact with an enemy with his body rolled up, such as when making revolving jump or spinning, he can knock the enemy down.

- Some enemies cannot be knocked down unless specific parts of the body are hit.

Key operation	Contents
(2. 30)	Makes revolving jump.
(8. 30)	Squats/Spins (during dash).
(4. 30)	Moves to the left/Dashes.
(6. 30)	Moves to the right/Dashes.
(5. 30)	Looks up.
(8. 30) +  (5. 30)	Spins and Dashes.
	Break/Resume.

### ■ Save

Press during a game and select "セーブして中断 (Save and suspend)" from the Break display to save the game. The game is automatically saved when the battery runs out or when the software is closed.

- "セーブ (Save)" stores the data for when ACT is cleared. If you have not cleared any ACT since you started playing the game, the saved contents are not changed even if you select "セーブして中断 (Save and suspend)".

### ■ Continue

When the game is over, the Continue display appears. To restart the game from the beginning of the stage (ACT) where the game was over, press within 10 counts.

### Information

- When you move to the next stage, the confirmation display appears asking whether to launch the specified software. Select "YES" to proceed to the next stage. When the next stage has not yet been downloaded, the display to the effect that downloading is needed appears. Select "OK" and then "YES" to download the next stage. After you complete downloading, you can proceed to the next stage.

## ドットクリエイター (Dot Creator)

### 機能選択

モードの選択を下で下さい。

- ☒ 新規作成
- ☐ 編集
- ☐ ダウロード\*
- ☐ 携帯電話本体への保存
- ☐ 赤外線通信
- ☐ ご利用の前にへ戻る



Function Selection display

You can create, edit, and download the data to be displayed on the dot-area.

- To download dot-area data, you need to communicate. The communication charge varies depending on the type of image or the design. Note that this service might be changed or closed without notice.

© Panasonic Mobile Communications Co., Ltd.

## 1 Software List ▶ ドットクリエイター (Dot Creator)

### ▶ Read "ご利用の前に (Before use)" thoroughly ▶ OK

- If you put a check mark for "次回からこの画面を表示しない (Does not show this display from next time)", the "ご利用の前に (Before use)" does not appear when you launch next time.

## 2 Do the following operations.

Function menu	Operation/Explanation
新規作成 (Create)	See "Create" on page 302.
編集 (Edit)	<p>▶ Select a dot-area data file to be edited ▶</p> <ul style="list-style-type: none"> <li>• For the display you are editing and the display for creating illustrations, see page 303.</li> </ul> <p>▶ 全保存 (Save all) Go to step 3 of "Create" on page 303.</p>
ダウンロード (Download)	<p>▶ Select a dot-area data file to be downloaded ▶</p> <p>▶ 次へ (Next) Go to step 3 of "Create" on page 303.</p>
携帯電話本体への保存 (Save to the phone)	<p>▶ Select a dot-area data file to be saved ▶</p> <p>▶ チェック in the dot-area ▶ 次へ (Next) Go to step 6 on page 303.</p>
赤外線通信 (送信) [Infrared Data Exchange (Send)]	<p>▶ Send ▶ Select a dot-area data file to be sent ▶</p> <p>▶ チェック in the dot-area ▶ 次へ (Next) ▶ YES ▶ TOPへ (To TOP)</p>
赤外線通信 (受信) [Infrared Data Exchange (Receive)]	<p>▶ 受信 (Receive) ▶ YES Go to step 3 of "Create" on page 303.</p>
ご利用の前にへ戻る [Return to "ご利用の前に (Before use)"]	<p>"ご利用の前に (Before use)" appears.</p> <ul style="list-style-type: none"> <li>• After checking, select "OK".</li> </ul>

### ■ Create

## 1 Function Selection display ▶ 新規作成 (Create)

### かんたん文字作成 (Easy text creation)

..... Enter characters to be displayed, and set a scroll, time, and brightness. You can enter up to 150 characters. (Up to 34 characters when a scroll is set.)

For the characters you can enter, see "使用可能な文字に関して (About usable characters)" below the character entry area.

### かんたん作成 (Easy creation)

..... Set effects such as "スクロール (scroll)", "シェイク (shake)", "点滅 (flicker)", "ホタル (firefly)", "波紋 (ripple)", "ウェーブ (wave)", or "反転 (highlight)" to your illustration.

### マニュアル作成 (Manual creation)

..... Create illustrations (frames) one by one, and set a lighting time, brightness, etc.

## 2 Edit

- For the display during editing and the display for creating illustrations, see page 303.
- When editing is completed, “プレビュー確認 (Check preview)” appears.

## 3 Check in the dot-area ▶ 次へ (Next)

## 4 Select the タイトル名 (Title name) field ▶ Edit the title name ▶ Select the ループ回数 (Loop frequency) field ▶ Select the number of times to loop.

- You can enter up to 10 full-pitch characters for a title name.
- When you do not change, go to step 5.

## 5 OK

 
- You can store up to 20 files in the storage area inside the i-appli software.
- When no space is found in the storage area, the data list in the storage area appears. Select the data to be overwritten (deleted) and check it in the dot-area. Then select “次へ (Next)”.

## 6 次へ (Next) ▶ Select a storage area inside the FOMA phone ▶

- When you want to save the data only to the storage area inside the i-appli software, select “戻る (Back)”.


## 7 TOPへ (To TOP)

### ■About the display you are editing

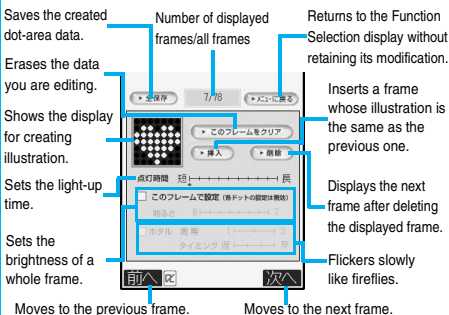

### ■About the display for creating illustration

 Moves a whole illustration.

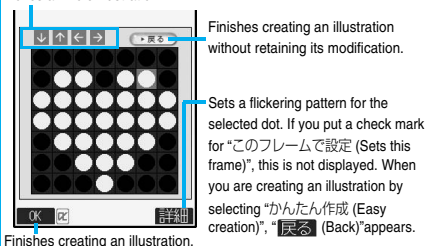

On the display for creating illustration, use to select dots. Each time you press , the color switches between yellow and black. The dots applied with “ホタル (glow of firefly)” are indicated by . Also, you can adjust the brightness of dots by pressing through .

## ケータイコーディネーター (Mobile Phone Coordinator)



You can collectively download image files or melody files that are provided to match with Custom Jacket, set them automatically, or use a guide for settings.

- To obtain the data list and to download image files or melody files, you need to communicate.

The communication charge varies depending on the type of image or of design.

© Panasonic Mobile Communications Co., Ltd.

### Downloadable items and procedures

- Stand-by display
- Ring tone
- Menu background
- Menu icon
- Dialing/Call receiving image
- Mail sending/receiving image
- Dot-area data

## 1 Software List ▶ ケータイコーディネーター (Mobile Phone Coordinator) ▶ Read “ご利用の前に (Before use)” thoroughly ▶ OK

- To set the size of characters on the display, select “大 (Large)”, “中 (Medium)”, or “小 (Small)”.
- If you put a check mark for “次回からこの画面を表示しない。(Does not show this display from next time.)”, “ご利用の前に (Before use)” does not appear when you launch next time.

## 2 Select a title ▶ Put a check mark for the theme to be changed ▶ (確定)

Downloading starts.

- Remove the check mark from the theme you do not want to change.
- Each time downloading of each file is completed, the confirmation display appears asking whether to save the file. Select “YES” or “NO”.
- When an invalid file is found during downloading, the downloaded images are not saved correctly, either.
- The Stand-by display, ring tone, dialing/call receiving image, and mail sending/receiving image are automatically set.
- “Menu icon” is set to “Customize”, and a background image and menu icons are automatically set.
- The items you set manually are listed. (You can also show the setting method.)
- When “ (終了)” appears at the lower left of the display, press to adjust the sound volume.

## 3 Press (終了) (End).

## ポケメート (Poké-mate)



Main display

The world of "Pocket Monster" prevails in your FOMA phone. With your partner Poké-mon who lives there, you can enjoy chatting with your friends and family using mail. The trial period of the pre-installed version is for three months including the month of your registration. After the trial period, you cannot use some functions, but you can still send mail messages and have a chat.

© 2006 Pokémon.

© 1995-2006 Nintendo/Creatures Inc./  
GAME FREAK inc.

© 2006 SQUARE ENIX CO., LTD.

- 1 **Software List ▶ ポケメートプリン版 (Poké-mate pre-installed ver.)**  
▶ Read "免責事項 (Disclaimer)" thoroughly  
▶ "承諾する (Agree)" ▶ "はい (Yes)" ▶ YES

You are connected to the site.

- 2 **メールアドレス登録 (Register a mail address)**  
▶ Follow the steps on the display  
▶ メール送信 (Send mail) ▶ (Send) ▶ OK

The confirmation mail message comes from the site. Bring up the mail message.

- 3 **Detailed received mail display ▶ Select the URL**  
▶ (選む) ▶ YES

When you are connected to the site, the registration of the mail address is completed.

- 4 **アプリに戻る (Return to appli) ▶ YES**  
"ポケメート (Poké-mate)" starts up.

- 5 (選む) ▶ Enter your nickname ▶ (選む)

● You can enter up 8 full-pitch or 16 half-pitch characters for a nickname.

- 6 (選む) (進む) ▶ (選む) (進む)  
▶ Select a Pokémon to be your partner  
▶ (選む) (進む) ▶ 次へ (Next) ▶ OK

The main display appears.

### ■ About the Main display

After the first-ever startup, the display for entering unregistered information (mail address, nickname, or partner depending on the registration state) appears. When they have already been registered, the Main display appears at startup.

- Press (選む) (選む) to display up to 30 chat records from the latest one.
- Press (選む) (MENU) to display the menu.

おしゃべり部屋 (Chat room)  
... Have a chat in the room being displayed.

 
メールひろば (Mail field)  
... Compose mail messages, and manage sent/received mail messages.

ポケモンロード (Pokémon road)  
... Use a monster ball to catch a wild Pokémon and browse the list of Pokémons you caught.

友達をとうろく (Register friends)  
... Register a Pokémon of your friend to the メールひろば (Mail field).  
友達に紹介 (Introduce to friends)  
... Introduce ポケメート (Poké-mate) to your friends who do not have

ポケメート (Poké-mate).  
おまけ設定 (Option)  
... Register your profile, perform other settings, and change your mail address.

## Gガイド番組表リモコン (G Guide Program List Remote Controller)

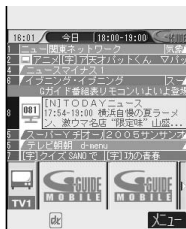

※ The display is for reference.

The actual one differs.

Local programs according to your region appear on your display.

This is a convenient i-appli software program that bundles the TV program list and AV remote controller function and the monthly charge is free. Anytime and anywhere you are, you can easily download terrestrial analog or terrestrial digital TV program information. You can know about titles, contents, and start/end times of TV programs. If there is any program you want to watch, you can reserve recording of the program on a DVD recorder over the Internet. (You need to have a DVD hard disk recorder that supports the remote recording reservation function. And you need to perform initial settings of this i-appli program.) Further, you can search for the program information by keywords such as program genres or celebrities you like. You can also remote-control a TV, video recorder, and DVD player. (Some models are not supported.)

- You need to perform the initial settings and to agree with the usage rules for the first time.
- You are charged packet communication fee.
- To use this i-appli program overseas, set the date/time for your FOMA phone to Japan time.
- For details, see "i-mode User's Manual".

### ■ About remote recording reservation function

If you have a DVD recorder that supports the remote recording reservation function, you can reserve recording from the program list of this i-appli program over the Internet even if you are away. For remote recording reservation, you need to perform initial settings of this i-appli program.

#### How to perform initial settings

1. Perform settings to connect the DVD recorder to the Internet.  
(Refer to the instruction manual of the DVD recorder you use.)
2. Software List ▶ Gガイド番組表リモコン (G Guide Program List Remote Controller) ▶ (選む) (選む) ▶ Remote recording reservation  
▶ Operate following guidance.

 
#### How to reserve programs

After the initial settings, specify your desired program and select "リモート録画予約 (Remote recording reservation)". Then, the DVD recorder specified on this i-appli program is connected via the Internet, and you can reserve the program recording.

※ When a program has already been reserved for the same time, the message to that effect appears on the Program List.

- You are charged packet communication fee.

### ■ Infrared remote-controller

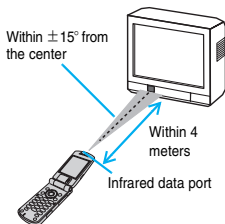

You can use the FOMA phone as a remote-controller for devices supporting infrared remote-controllers. i-appli makes use of infrared rays to let the FOMA phone send remote control signals.

- To use remote control devices, you may need to download the software for those devices. The key operation for the remote-controller differs depending on the software.
- This function does not work with some devices.
- Communication might be affected by compatible devices and the ambient light.
- You cannot use infrared remote-controller during Self Mode.
- Aim the FOMA phone's Infrared data port at the front of the device to be operated.  
You can operate up to 4 meters away from the device.
- Keep the angle of the infrared rays within  $\pm 15^\circ$  from the center.

## 電子マネー「Edy」 (Electronic Money “Edy”)



Electronic Money “Edy” is a prepaid type of electronic money service that is easy-to-use for anybody. Electronic Money “Edy” is a service provided by bitWallet Inc. At using “Edy”, make sure you read the cautions and contractual clauses and then proceed to the initial settings.

© 2006 bitWallet, Inc.

### Initial settings and service registration (charge-free)

#### Deposit

Make a deposit in “Edy” at shops

Make a deposit in “Edy” with i-mode\*

#### Use (payment)

Make a payment at shops

Mobile Edy (payment over the Internet)\*

#### Convenient functions

Balance/record inquiry

Edy gift receipt

Edy to Edy  
(Sending/Receiving Edy money to and from another mobile phone) \*

#### Support

Procedures for “Edy” when changing models\*

Procedures for “Edy” when it malfunctions\*

The \* mark indicates the services you need to apply for in advance.

**For detailed service contents of Electronic Money “Edy”, shops dealing in “Edy”, or procedures required for model change or for malfunction, refer to the “Edy” web page and i-mode site, or contact the following:**

Contact the following for this service:

#### bitWallet Inc.

- Browse the Edy web page and i-mode site to get the information about “Edy”.

Web page ... <http://www.edy.jp>

i-mode site ... ☎ Menu→メニューリスト(Menu List)→くらしの情報  
(Living information)→生活総合 (Lives overall)→電子マネー「Edy」(Electronic Money “Edy”)



 
QR code for accessing the site

- When you are in trouble with procedures in regard to “Edy”  
Edy emergency call: 0570-081-999 (Navigation dial)  
Service hours: 9:30 a.m. to 7:00 p.m. (Weekdays)  
10:00 a.m. to 6:00 p.m. (Saturdays/Sundays/Holidays)  
※ Make sure that you dial the correct number.

#### Information

- You are charged packet communication fees for using i-mode communications such as “Initial settings”, or “Main menu” functions of i-cplli.
- The current FOMA phone can be used just like the Edy card even after you replace it with a new model, so be careful when you discard it.
- When you set “Network set” of “Software setting” to “OFF” or activate “Self mode”, you cannot execute “Initial settings” or operate the “Main menu” functions of i-cplli as you cannot use i-mode communications.
- You need to receive the mail message for starting the settlement of accounts from the Edy center for Mobile Edy (payment over the Internet) to be available; therefore, if you have set to reject receiving mail messages over Internet by Spam Mail Prevention (Reject/Receive Mail Settings), be sure to add “bitwallet.co.jp” as one of the domains.
- Note that we cannot be held responsible for the information you have specified in the FOMA phone.

## ケータイクレジット「iD」 (Mobile Phone Credit "iD")

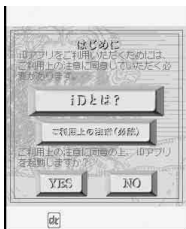

※ The display is for reference.  
The actual one may differ.

Mobile Phone Credit "iD" is a credit service that enables you to do shopping or cashing by placing your OsaiFu-Keitai over a reader. You can do shopping very easily without taking a card out of your wallet or without signing in.

- To use "iD", you need to subscribe to your card publishing company that supports "iD", and to have iD oppli and card oppli provided by that company.
  - To launch iD oppli for the first time, you need to agree with "ご利用上の注意 (Cautions in use)", to get ready for use, and then to download card oppli.
  - The expense (annual fees, etc.) charged for the credit service that supports "iD" varies depending on the card publishing company.
  - You are charged a packet communication fee for downloading iD oppli, and card oppli of the credit card publishing company.
  - For details, refer to "i-mode User's Manual".
  - For the information about "iD", refer to the iD web page and i-mode site.
- Web page... <http://id-credit.com>  
i-mode site... ☞ Menu→メニューリスト (Menu List)→  
ケータイクレジット「iD」 (Mobile Phone Credit "iD")



QR code for accessing the site

## DCMXクレジットアプリ (DCMX Credit oppli)



※ The display is for reference.  
The actual one may differ.

"DCMX" is a credit service that supports "iD" and offered by NTT DoCoMo Group. Available services are "DCMX mini" which enables you to use up to ¥10,000 per month, and "DCMX" and "DCMX gold" which offer the cashing and revolving repayment services and also publish credit cards. With "DCMX mini", you can easily make a subscription from this i-oppli program and immediately use Mobile Phone Credit.

### Subscribing for membership/Screening ※1

### Setting card information

<p><b>Use</b></p> <p>No troublesome deposit is required! Just by placing the setup-completed mobile phone over the reader at a shop, you can enjoy shopping without signing in.</p>	<p><b>Check ※2</b></p> <p>You can check, on your mobile phone, the balance for the current month and detailed account!</p>
	<p><b>Change</b></p> <p>For updating your card or having it re-published, you can apply from the oppli program.</p>

※1 The simple online screening is conducted at your subscription.

For subscribing to a service other than "DCMX mini", you are connected to the subscription page for i-mode.

※2 The checking function for usage status and others is available for "DCMX mini" only.

- For service contents and details of subscriptions, refer to the following:  
Web page... <http://www.dcmx.com>  
i-mode site... ☞ Menu→メニューリスト (Menu List)→  
DCMX (ケータイクレジット) [DCMX (Mobile Phone Credit)]



QR code for accessing the site

- For inquiries about this service, contact "DoCoMo Information Center" on the back page of this manual.

### Information

- To launch this oppli program for the first time, you need to agree with "ご利用上の注意 (Cautions in use)".
- You are charged a packet communication fee for i-mode communication to use this i-oppli program.
- You cannot launch DCMX oppli from this i-oppli program after you complete the subscription/settings. To check your current balance or make changes on the settings, launch iD oppli and select DCMX oppli to launch it by linkage.

### Cautions on OsaiFu-Keitai compatible i-oppli

- Note that we take no responsibility for any information set on your IC card.
- For details, refer to "i-mode User's Manual".

## Starting i-opp! Automatically

You can make i-opp! launch automatically at the set date and time. Set the date and time for automatic start using Auto Start Time.

### Auto Start Set

Setting at purchase OFF

You can set whether to enable automatic start of i-opp!.


#### 1 Auto start set ▶ ON or OFF

### Auto Start Time


You can set the date and time for automatic start. You can set for up to three software programs.

#### 1 Software List/IC Card List ▶ (F1) ▶ Auto start time

#### 2 Put a check mark for the item to be set ▶ (Finish)

Time interval set . . . . . Starts at an interval specified by the software. The setting is completed.  
Start time set . . . . . Starts at the set start time automatically.  
• "☐ " and "☒ " switch each time you press .


#### 3 Select start time ▶ ▶ Enter the date and time to be set ▶

Use  to move the cursor and use the keypad to enter numbers.  
• Enter the A.D. year.  
• Enter the time on 24-hour basis.

#### 4 1 time

1 time . . . The setting is for no repetition (once only). Go to step 6.  
Daily . . . Launches the software every day. Go to step 6.  
Weekly . . Launches the software on the specified day/s of the week.

#### 5 Put a check mark for the day/s of the week to be set ▶ (Finish)

 
• "☐ " and "☒ " switch each time you press .

#### 6 Press (Finish).


## Auto Start Info



You can check whether software has started automatically and properly. Also, you can check the information of start failure from IC card. Up to three records of automatic start and a record of start failure from IC card are stored.

#### 1 ▶ opp! info ▶ Auto start info

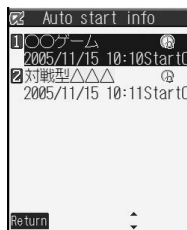



Auto Start Info display

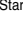Start  . . . . Started automatically and properly.

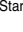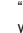Start  . . . . Did not start automatically. When "Start" is displayed, you can press  to launch the software.

Start  . . . . Has not started yet.

### Information

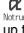- Software does not start automatically in the following cases:
  - The FOMA phone is switched off
  - The date and time are not set
  - Another function is working
  - During Lock All or PIM Lock
  - While animation/Flash movie is being played back
  - The time set for automatic start is identical to the reserved time set for "Software update", or the time set for an alarm of "Alarm", "Schedule" or "ToDo"
  - While "Automatic display" is set
  - When a launch time has been specified to the same software within 10 minutes from the previous auto-launch
- If automatic start fails, " " appears on the desktop. Select the icon and press  to bring up the Auto Start Info display.

## <i-opp! Stand-by Display>

### Operating i-opp! Stand-by Display

#### Software Setting (Stand-by Set)




You can set i-opp! for the Stand-by display. Once set, the i-opp! Stand-by display automatically appears each time you bring up the Stand-by display.

#### 1 Software List/IC Card List ▶ (F1) ▶ Software setting ▶ Stand-by set

ON. . . . . Sets the i-opp! Stand-by display.

 
OFF. . . . . Releases the i-opp! Stand-by display.

#### 2 Press (Finish).

" " is displayed for the software set as the Stand-by display. " " or " " is displayed while an i-opp! Stand-by display is running.



### To operate i-oppli as a normal i-oppli when an i-oppli Stand-by display is running

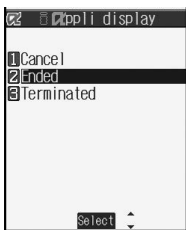

From the i-oppli Stand-by display, press or . The display changes to a blinking or and then you can operate the i-oppli normally.

• To return to the i-oppli Stand-by display, press and hold or for at least one second or press ; then select "Ended". To release the i-oppli Stand-by display, select "Terminated", and select "YES".

#### Information

- With some software programs set as the i-oppli Stand-by display, you can press a key to go from the normal i-oppli status to the i-oppli Stand-by display status. However, you cannot return to the i-oppli Stand-by display if another menu function is operating.

#### Information

- If you turn off the FOMA phone while the i-oppli Stand-by display is running, the confirmation display appears asking whether to launch i-oppli when you turn on the power again. Select "YES" or "NO".
- You can set only one software program for the i-oppli Stand-by display.
- Some i-oppli programs cannot be set for the Stand-by display.
- Note that you might not be able to receive timely information if you have set "Software setting (Stand-by net)" to "OFF".
- If the software which connects to the network is set for the i-oppli Stand-by display, it might not operate successfully because of radio wave conditions.
- When the i-oppli Stand-by display is activated, the image set for "Stand-by display" of "Display setting" will not be displayed.
- When you bring up the Stand-by display while a menu function is operating, the image set for "Stand-by display" of "Display setting" will be displayed, even when the i-oppli Stand-by display is set.
- When communicating frequency is extremely high in a certain period of time while running i-oppli, the confirmation display appears prompting you to confirm by pressing or . When you press or , the confirmation display appears asking whether to continue communicating. Select "YES" to continue communicating. When you select "NO", communicating ends but the i-oppli continues running. Select "End" to close the i-oppli. When you select "NO" and try to re-start communicating, the confirmation display appears asking whether to start communicating. Select "YES" or "End".
- If you set Lock All or PIM Lock when the i-oppli Stand-by display is running, the i-oppli Stand-by display will end. If you set Lock All, the image set for "Stand-by display" of "Display setting" will be displayed and if you set PIM Lock, the default Stand-by display will be displayed. The i-oppli Stand-by display will return when you release Lock All or PIM Lock.

### Software Setting (Stand-by Net)

You can set whether to permit communication for when the i-oppli Stand-by display is running.

- 1 **Software List/IC Card List** (FUNC)
  - ▶ **Software setting** ▶ **Stand-by net**
  - ▶ **ON or OFF** (Finish)

### End Stand-by Display

You can temporarily end the running i-oppli Stand-by display. Also, you can release the i-oppli Stand-by display.

- 1 **appli settings**
  - ▶ **End stand-by display** ▶ **End or Terminate**

- When you select "Terminate", the confirmation display appears asking whether to release the i-oppli Stand-by display. Select "YES".

#### Information

- If you release the i-oppli Stand-by display, the image set for "Stand-by display" of "Display setting" is displayed.

### End Stand-by Info

When the i-oppli Stand-by display does not end successfully, you can check the date/time and its reason.

- 1 **appli info**
  - ▶ **End stand-by info**

#### Information

- When the i-oppli Stand-by display ends successfully (normal end), the information is not recorded.
- When "FUNC" is displayed on the End Stand-by Info display, press (FUNC), and select "Copy info" to copy the information. Select "Delete info", and select "YES" to delete the information.

### Setting Lights and Vibrators for when Running i-oppli

#### Backlight

Setting at purchase	Depend on system
---------------------	------------------

You can set the backlight operation for when an i-oppli program is running.

- 1 **appli settings** ▶ **Backlight**
  - Depend on system ... Follows the setting of "Backlight".
  - Depend on software ... Follows the setting of software.
  - All time ON. .... Lights constantly.

#### Vibrator

Setting at purchase	Depend on system
---------------------	------------------

- 1 **appli settings** ▶ **Vibrator**
  - Depend on system ... Does not work regardless of the setting of "Vibrator". With some software, vibrator will work.
  - Depend on software ... Follows the setting of software.



## Information

- With some software programs, the backlight and vibrator settings are "OFF". Consequently, if you set "Depend on software", the backlight and vibrator will not work; if you want them to work, set "Depend on system".

## < i-appli (miniSD) >

### Displaying i-appli Data Files inside miniSD Memory Card

Depending on the i-appli program, you can save its data files on the miniSD memory card.

You can display the i-appli data files saved on the miniSD memory card.


- 1    i-appli (miniSD)  
▶   i-appli (miniSD)





## Information

- You can operate only when the same UIM that was used for downloading i-appli is used.

### Function Menu while i-appli Data File is Displayed

- 1 While an i-appli data file is displayed  
▶  (FUNC) ▶ Do the following operations.

Function menu	Operation/Explanation
Folder info	<p>You can display the information of the program that uses the selected folder, available/unavailable for folder usage, and the reason if unavailable.</p> <ul style="list-style-type: none"> <li>• Use  to scroll the display to check the information.</li> </ul>
Delete folder	<p>You can delete the selected folder and files in the folder.</p> <p>▶ Enter your Terminal Security Code</p> <p>▶  YES</p>

